




FLASHING FLANGE

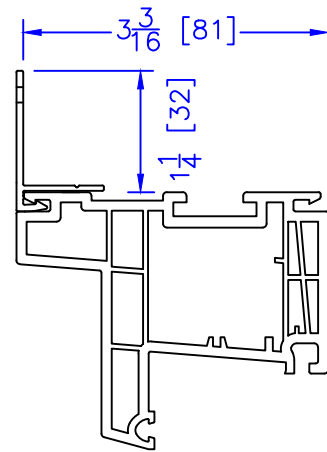


7/8" BM/J-TRIM

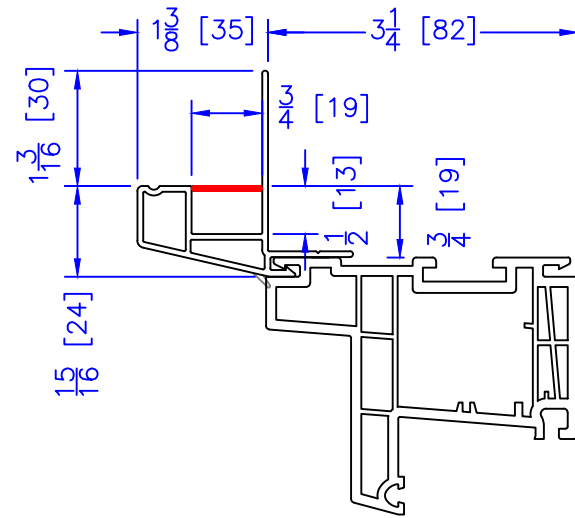


1-1/2" BM/J-TRIM

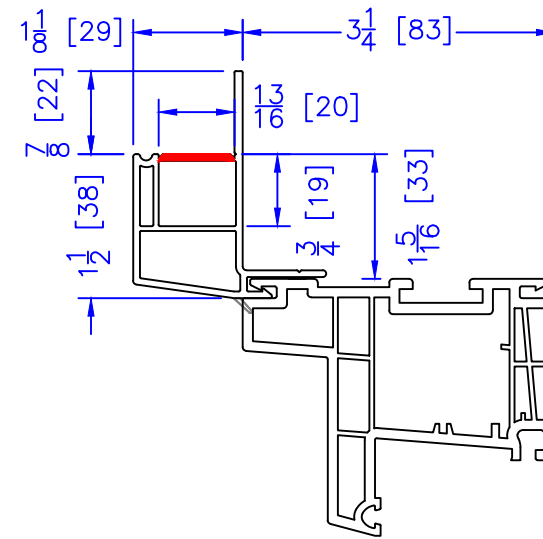


1-1/2" RENO BM

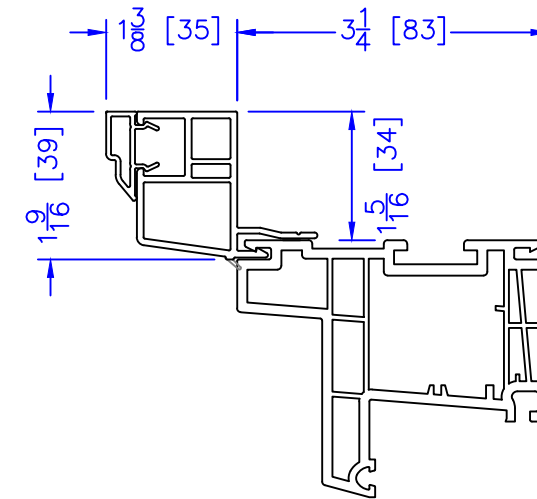


2" RENO BM

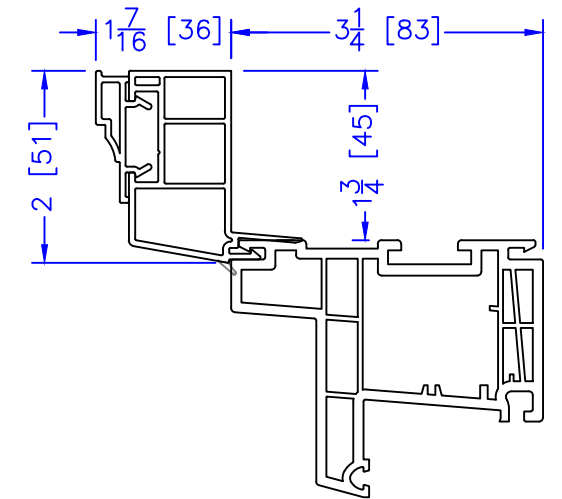


2" BM/J-TRIM

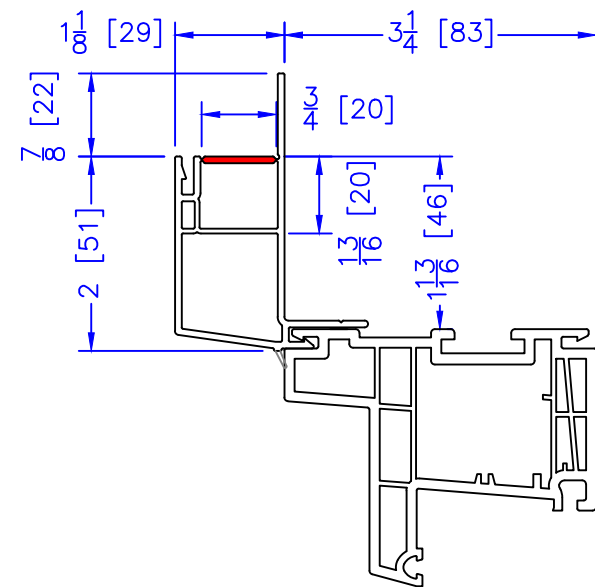


2" 180 BM/J-TRIM

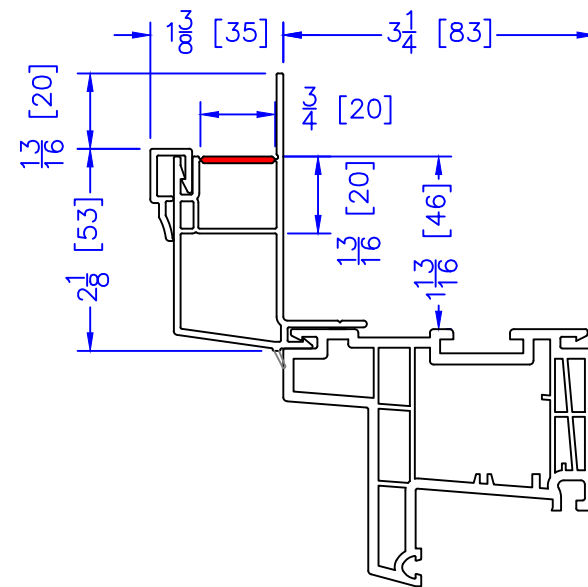


3-1/2" BM/J-TRIM

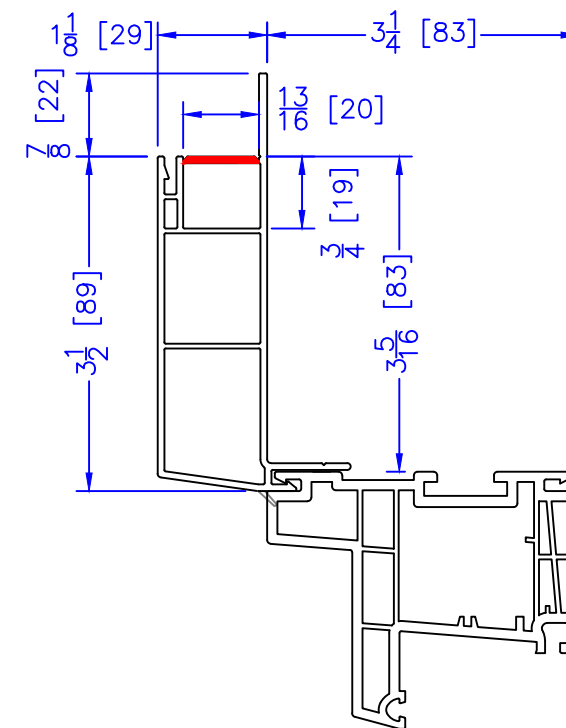

3-1/2" 180 BM/J-TRIM

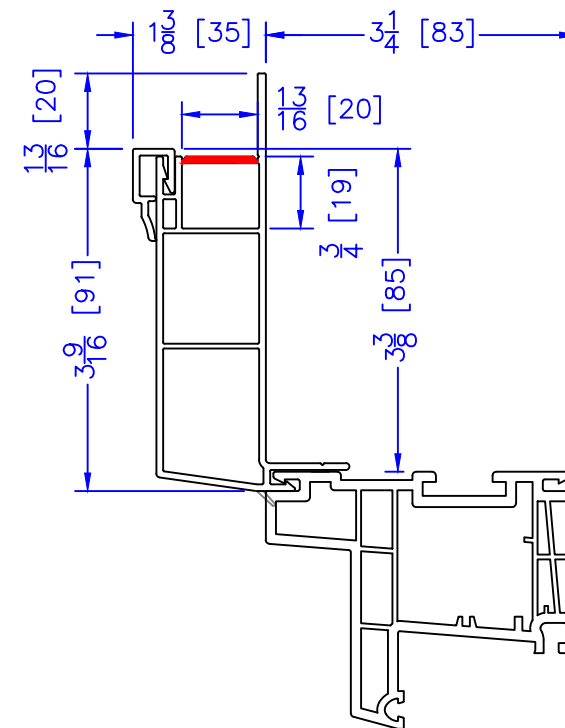

SILL BM

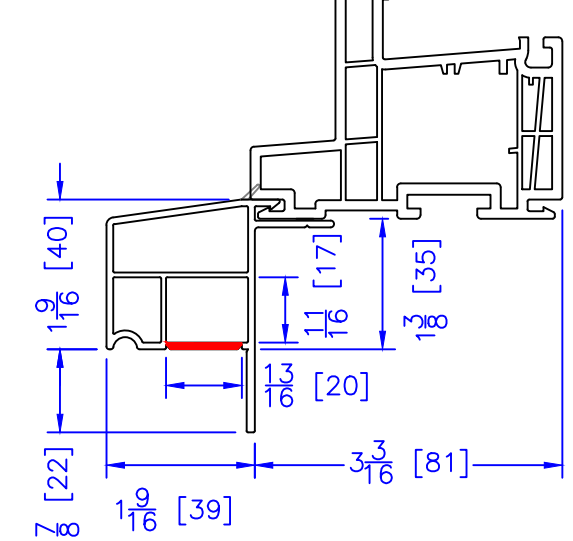

 = VINYL WALL CAN BE REMOVED TO TURN BM INTO J-TRIM

NOTE: THE OFFSETS FOR THE OUTSWING DOORS ARE THE SAME AS SHOWN FOR THE INSWING